 


Creating Your Design


To create a design for the Button Maker, visit <https://designer.buttonmakers.net/desktop/index.php> to use their online button creation tool or download templates for Microsoft Word or Photoshop. Use the 2.25-inch size for this button maker. Use the graphic hole punch to cut your button print outs.

Parts of the Button Maker and Buttons

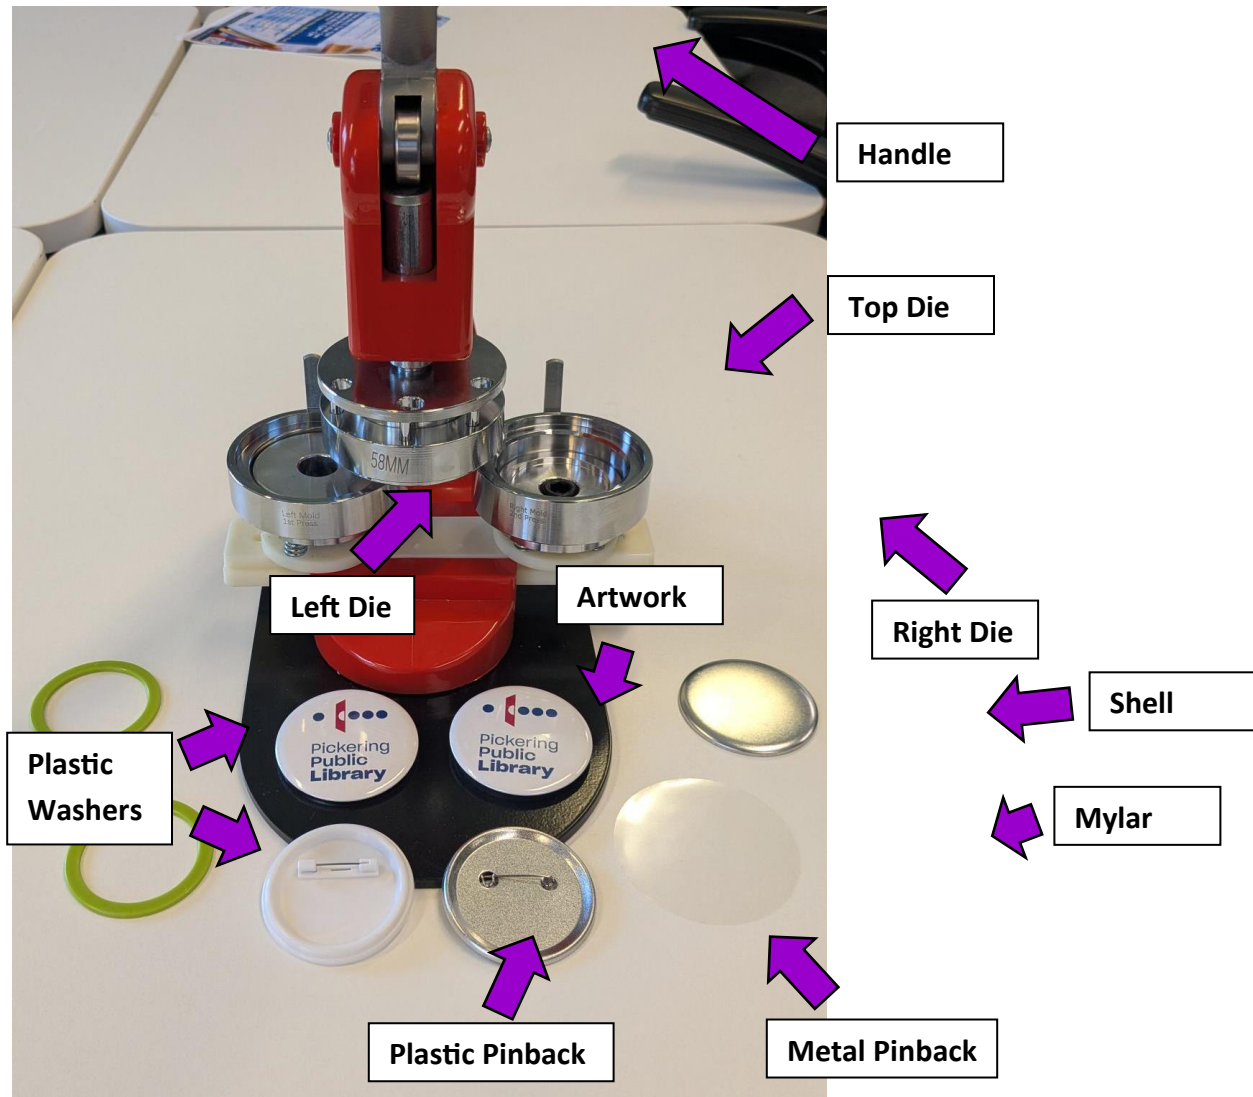


Making a Button

1. Place a Shell in the Left Die

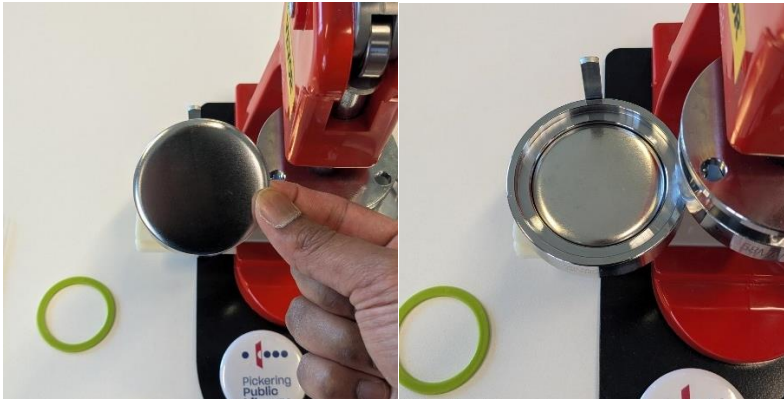

2. Place the Artwork on top of Shell in Left Die

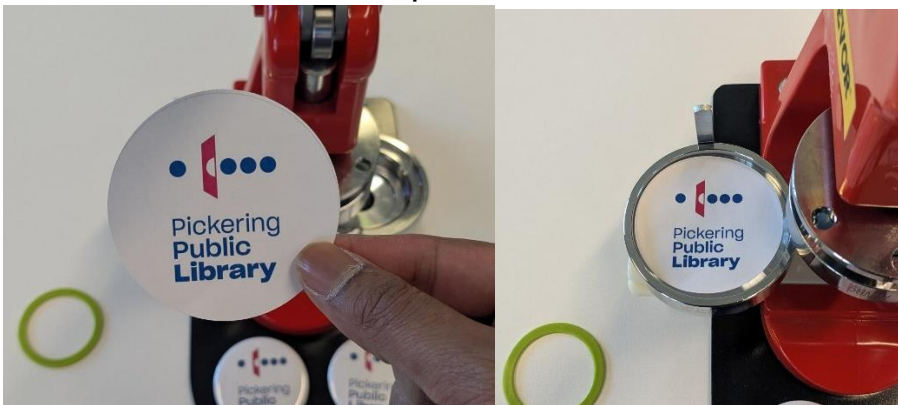

3. Place the Clear Mylar on top of the Artwork



4. Choose whether you want to use a plastic or metal pinback



5. If using a metal pinback, put one plastic washer in the right die (unless the machine is labelled otherwise) or none for plastic.



6. Place the Pinback (plastic or metal) facedown in the right die and angle it slightly to the left (toward 11 o'clock or 30 degrees left)



7. Slide the left die under the top die and bring down the handle



8. Slide the right die under the top die and bring down the handle



9. Your button is done!

